


## SET UP INSTRUCTIONS 12" X 12" PRINTS



HAMMER NAILS INTO DESIRED LOCATIONS ON WALL

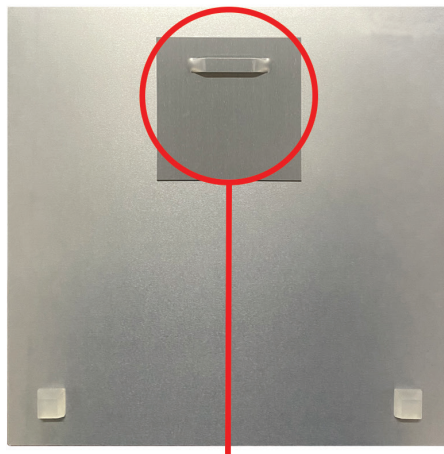

SHADOW MOUNT




WEARING THE INCLUDED GLOVES  
HOOK SHADOW MOUNTS ON BACKSIDE  
OF PRINTS ONTO NAILS TO  
COMPLETE INSTALLATION

## SET UP INSTRUCTIONS ALL SIZES LARGER THAN 12" X 12"




PLACE MOUNTING BRACKET ON DESIRED LOCATION ON WALL AND MARK HOLES FOR SCREWS AND MAKE SURE BRACKET IS LEVEL \*

\*PRO TIP: MEASURE THE DISTANCE FROM THE CEILING OR FLOOR AGAINST THE LEVELED BRACKET, SINCE LEVEL MAY APPEAR CROOKED IF THE CEILING IS ALSO NOT LEVEL

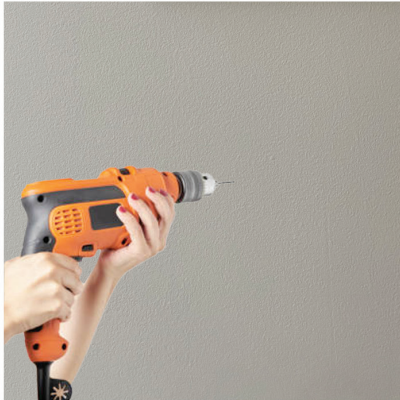

DRILL HOLES FOR WALL ANCHORS USING 5/16" DRILL BIT

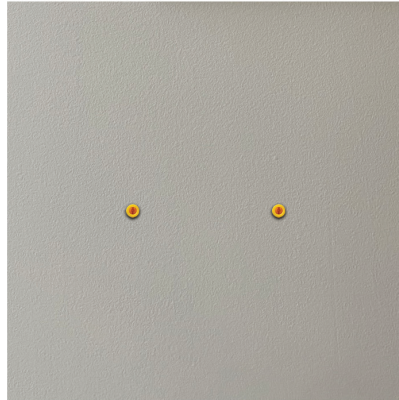

INSERT WALL ANCHORS INTO HOLES ON WALL



SECURE MOUNTING BRACKET TO WALL WITH SCREWS



WEARING THE INCLUDED GLOVES HOOK SHADOW MOUNT ON BACKSIDE OF PRINT ONTO WALL BRACKET TO COMPLETE INSTALLATION