

Backlit Ring 1003 - Hanging

The Formulate® Backlit Ring Hanging Structure 1003 is a great way to advertise at any tradeshow or event. Fabric graphics stretch over the light aluminum tube frame. The structure measures 10' diameter and 3' tall; LED light hangs in the center providing the perfect glow.



features and benefits:

- Constructed with 30mm (1 1/8") tubes and push-button connectors for simple assembly
- LED lighting is suspended in the middle of the structure
- Engineer certified (structural engineer certificate available upon request)
- Zipper pillowcase fabric graphic with bottom panel
- Comes with hanging cables
- Collapses to a fraction of its size and easy to store & ship
- Comes in a box or case

dimensions:

Hardware

Assembled unit:

120"w x 36"h
3048mm(w) x 914.4mm(h)

Approximate Weight:
86 lbs / 39 kg

Graphics

Graphic material: Backlit Textile (dye-sublimated fabric) or Intensity (UV printed)

See graphic templates for graphic sizes.

Refer to related graphic templates for more information Visit:

<https://www.theexhibitorshandbook.com/downloads/download-graphic-templates>
or click here

Shipping

Packaging - 1 Box:

Shipping dimensions:
1x BOX: 16" L x 51" H x 16" D
(406.4mm x 1295mm x 406.4mm)

Approximate shipping weight:
96 lbs / 43.6 kg

Packed in optional OCE2 Case:

Shipping dimensions:
1 x BOX: 17" L x 51" H x 17" D
431.8mm(l) x 1295mm(h) x 431.8mm(d)

Approximate shipping weight:
120 lbs / 54.5 kg

additional information:

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications

SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS:




REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

1. UNZIP COVER ZIPPERS
2. CAREFULLY REMOVE FABRIC COVER
3. CLOSE ALL ZIPPERS
4. FOLD OR ROLL NEATLY
5. PLACE FABRIC IN COVER BAG

SET UP INSTRUCTIONS


A	DESCRIPTION	7/11/24	DATE
REV.		BY	

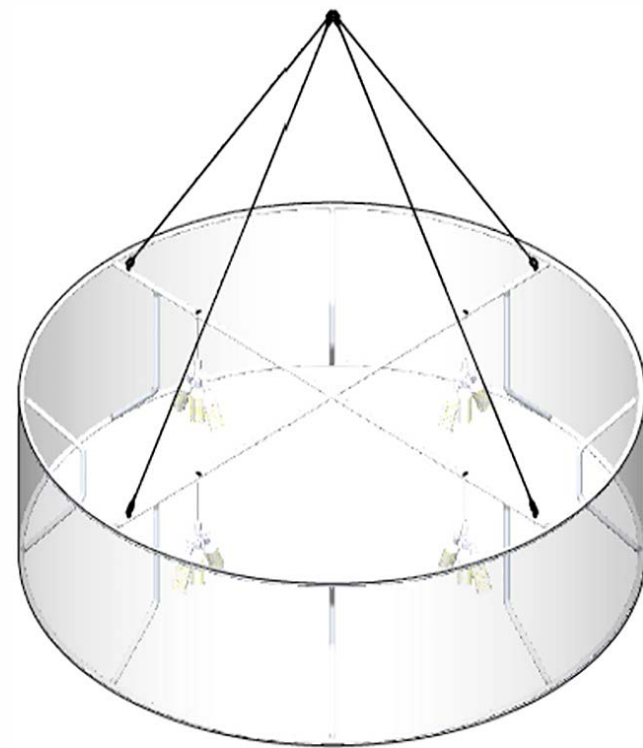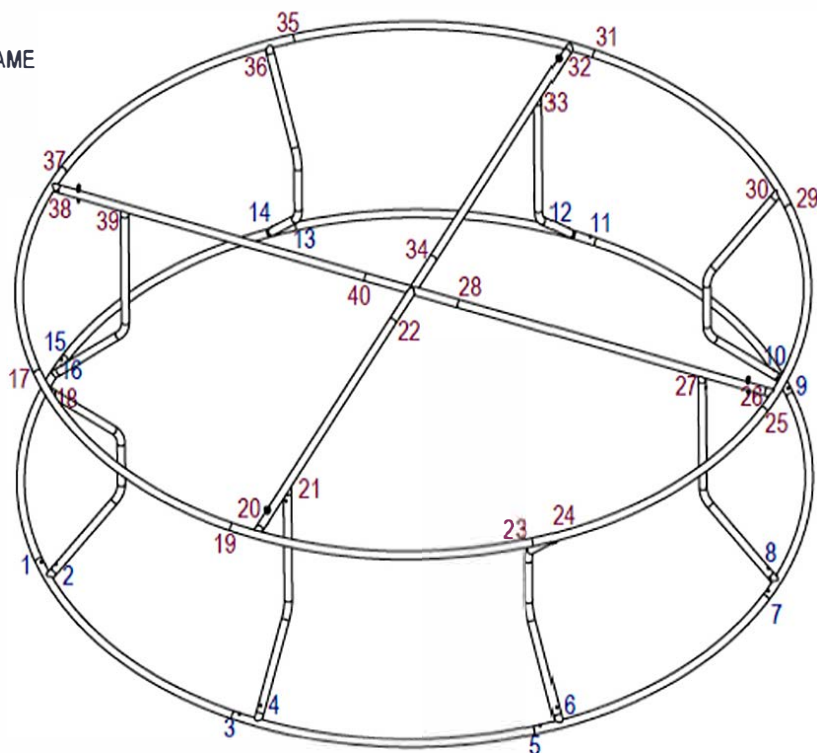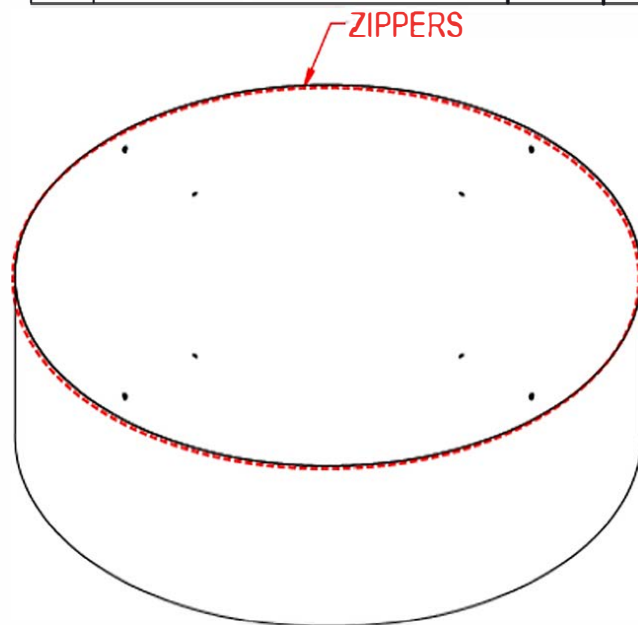

SWAGE WITH SNAP BUTTON CONNECTIONS



SNAP ON BUTTON

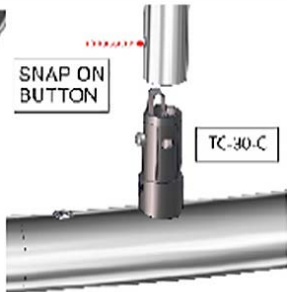

EYEBOLT TO TUBE




WIRE CABLES



LIGHT SET UP INSTRUCTIONS:

10' Socket Cord


24W

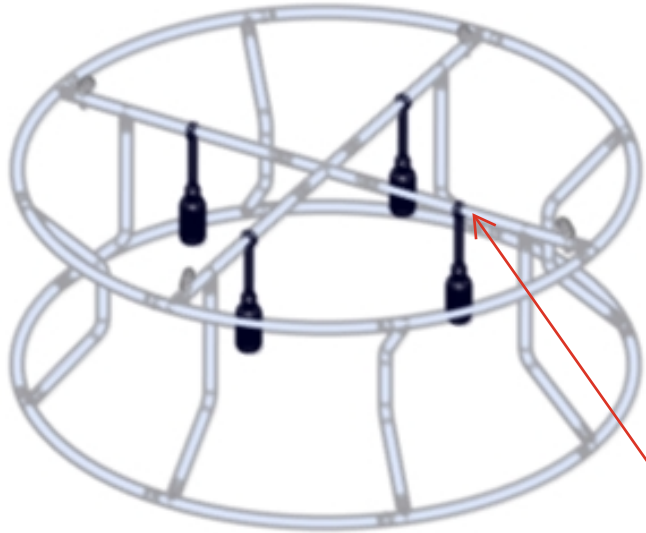

TUBE CORD CLIP



TO POWER SUPPLY

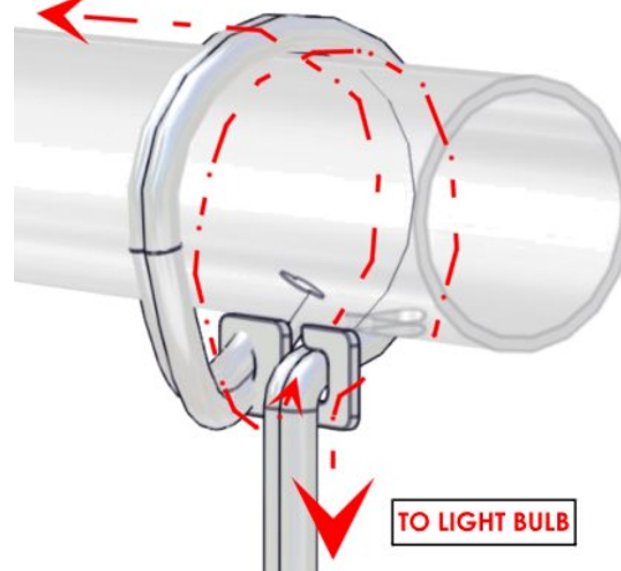

CORD WRAPS AROUND TUBE

TO LIGHT BULB