

## Set-up



Open all the end and center 'A' frames

1




Push each locking arm down to secure the frame

2



Push fit the top horizontal tubes into the 'A' frames, ensure the plastic joiners face inwards

3

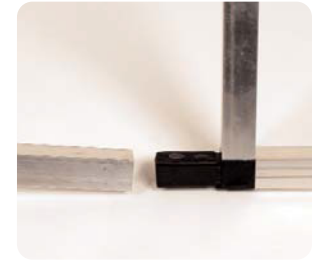

Push fit the bottom horizontal tubes into the 'A' frames, ensure the plastic joiners face inwards

4

## Graphic attachment



Pass the elastic bungee cord through the graphic eyelet

1



Secure elastic bungee around the frame with hook

2



Corner eyelets require a bungee cord loop around the top and side of the frame to properly secure

3