


L-Shape 0808-3 - Hanging

The Formulate® L-Shaped Hanging Structure 0808-03 provides a sharp design to any booth or exhibit. This ceiling-mounted sign is lightweight so it can be taken multiple events and features powerstretch pillowcase fabric graphics that fit over tube structures to display images from several directions.

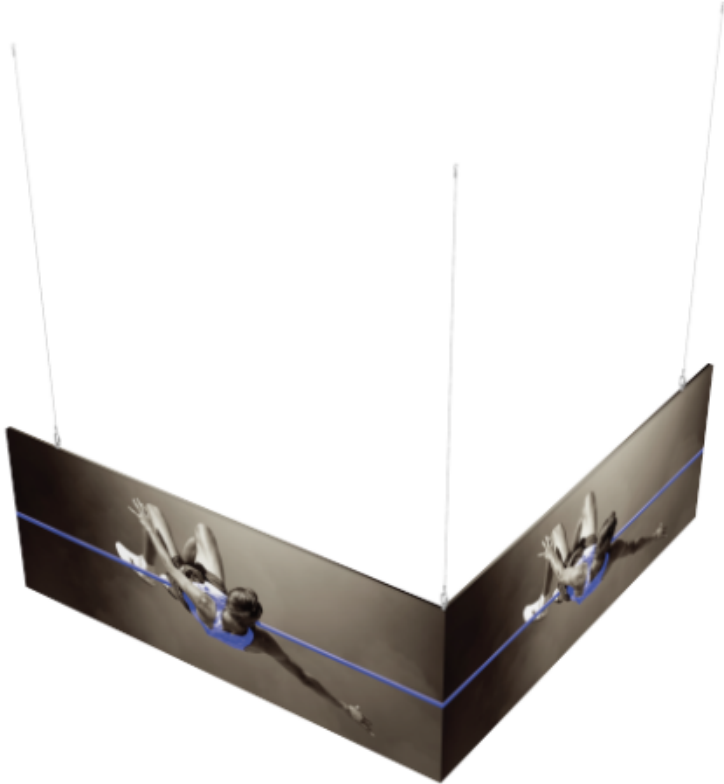

features and benefits:

- 8'W x 8'L x 3'H
- Constructed with 30mm (1 1/8") tubes and push-button connectors for simple assembly
- Engineer certified (structural engineer certificate available upon request)
- Double-sided zipper pillowcase fabric graphics
- Comes with hanging cables
- Collapses to a fraction of its size and easy to store & ship
- Comes in a box or case

dimensions:

Hardware

Assembled unit:

96" w x 36" h x 96" d
2438.4mm(w) x 914.4mm(h) x 2438.4mm(d)

Approximate Weight:
37 lbs / 16.8 kg

Graphics

Graphic material: Powerstretch

See graphic templates for graphic sizes.

Refer to related graphic templates for more information Visit:

<https://www.theexhibitorshandbook.com/downloads/download-graphic-templates>
or click here

Shipping

Packaging - 1 Box:

Shipping dimensions:
1x BOX: 16" L x 48" H x 16" D
(406.4mm x 1219mm x 406.4mm)

Approximate shipping weight:
47 lbs / 21.4 kg

Packed in optional OCE2 Case:

Shipping dimensions:
1 x BOX: 17" L x 48" H x 17" D
431.8mm(l) x 1219mm(h) x 431.8mm(d)

Approximate shipping weight:
71 lbs / 32.3 kg

additional information:

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications

SET UP INSTRUCTIONS:

1. CONNECT BOTTOM AND TOP TUBES FOLLOWING THE LABELS
2. CONNECT SIDE TUBES
3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
4. CAREFULLY REMOVE FABRIC COVER FROM BAG
5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
6. PULL COVER CAREFULLY UP TO THE TOP
7. CLOSE ALL ZIPPERS
8. ADJUST FABRIC AROUND THE FRAME
9. CONNECT CABLE HARNESS TO THE EYEBOLTS
10. COMPLETELY TIGHTEN THREADED CONNECTORS

BREAK DOWN INSTRUCTIONS:

REVERSE SET-UP STEPS TO BREAKDOWN FRAME

FABRIC CARE INSTRUCTIONS:

1. UNZIP COVER ZIPPERS
2. CAREFULLY REMOVE FABRIC COVER
3. CLOSE ALL ZIPPERS
4. FOLD OR ROLL NEATLY
5. PLACE FABRIC IN COVER BAG

